



Dell Inspiron 7568 Trackpad Replacement Guide

This guide will show you how to replace the trackpad on your Dell Inspiron 7568.

Written By: Yash Samant



INTRODUCTION


By following the steps in this guide one should be able to replace the trackpad on your device (Dell Inspiron 7568)



TOOLS:



- [Phillips #1 Screwdriver](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Battery

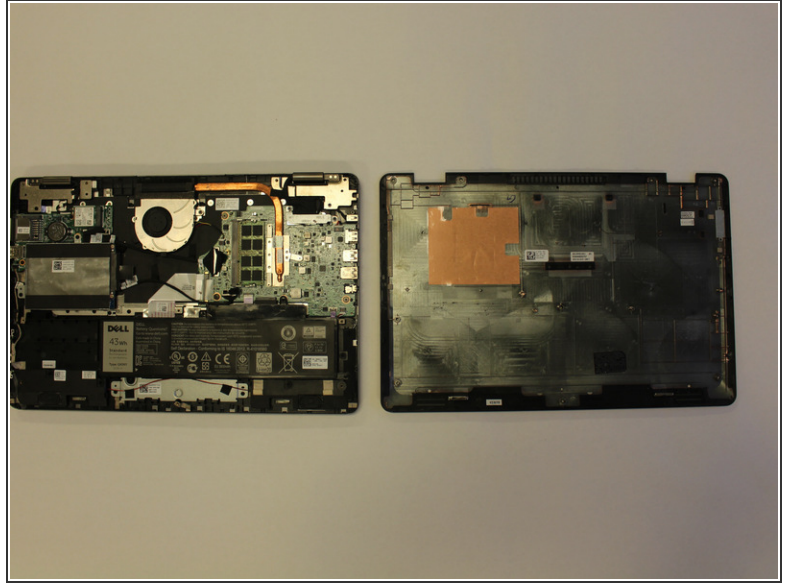



- Unscrew & remove the ten 7mm screws (using a ph1 screwdriver) holding the bottom cover
- Remove the bottom cover

Step 2

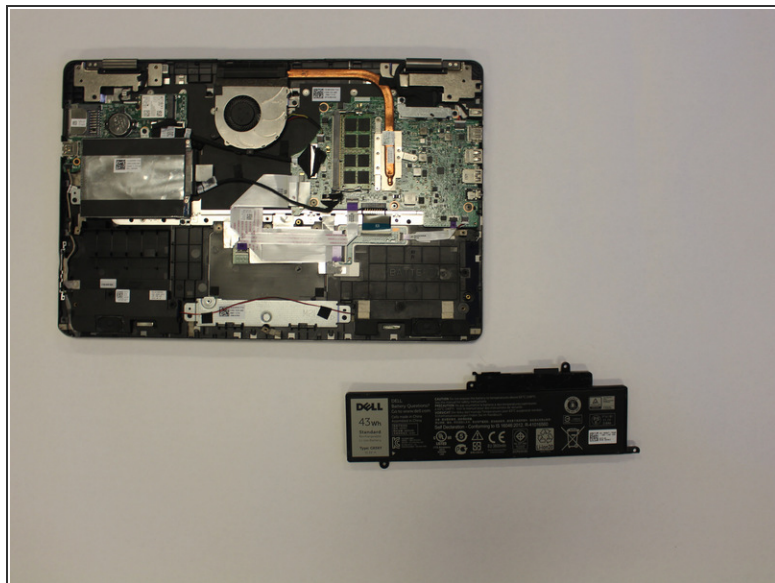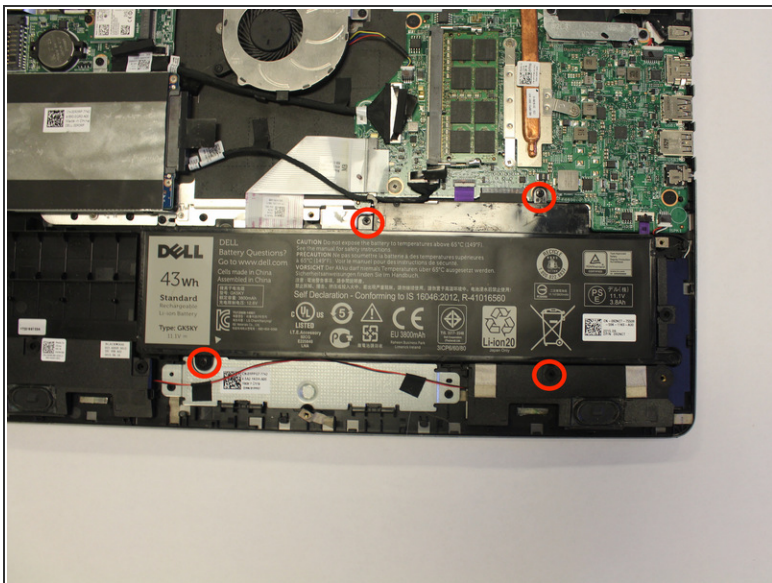



- Unscrew & remove the four 3mm screws (using the ph1 screwdriver bit) holding the battery
- Unhinge the connector cable to the battttery
- Remove the battery

Step 3 — Track Pad

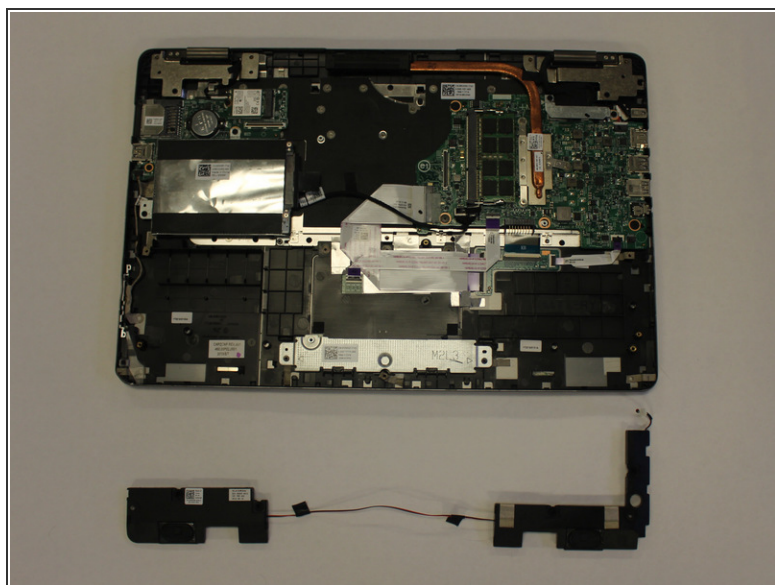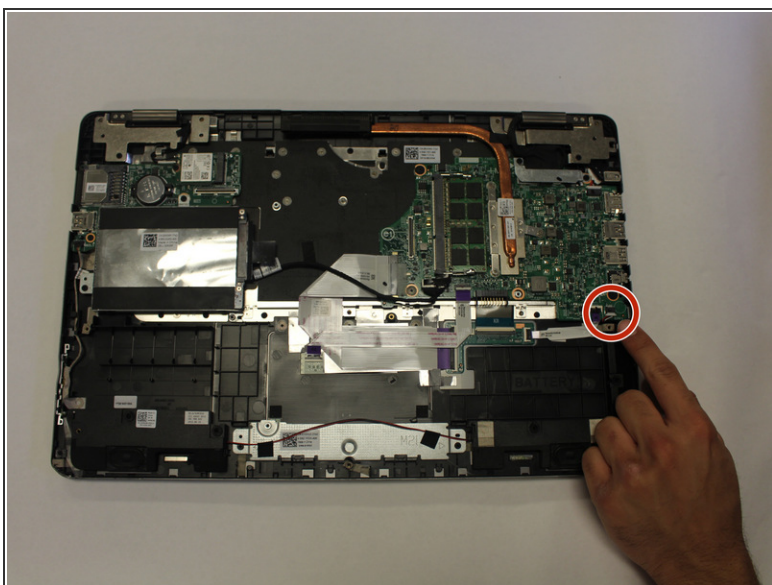




- Unplug the speaker cable and remove the speakers

Step 4

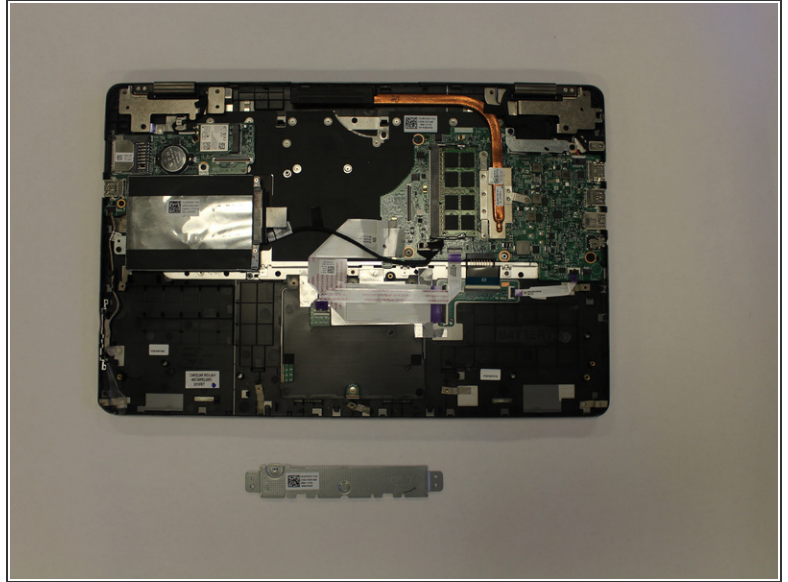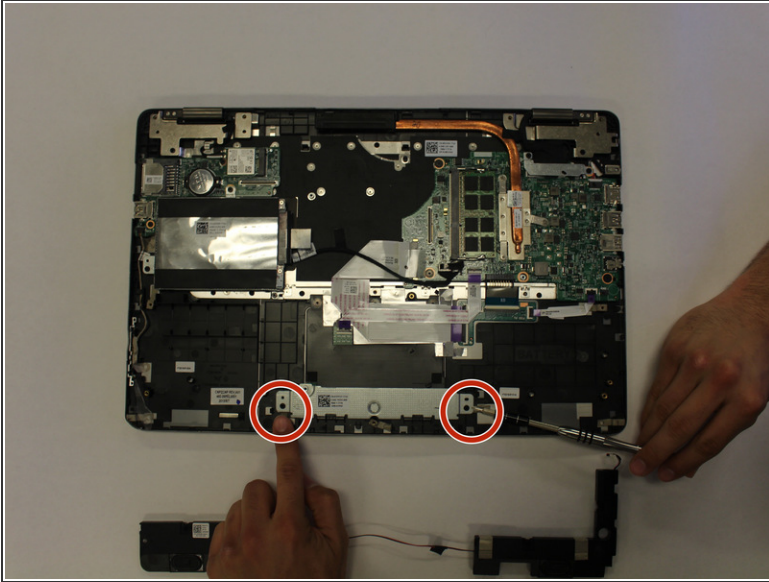


- Unscrew & remove the two 3mm screws (using a ph1 screwdriver bit) holding the touchpad bracket
- Remove the touchpad bracket

Step 5

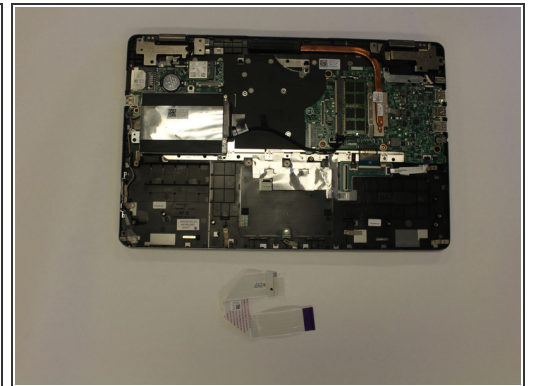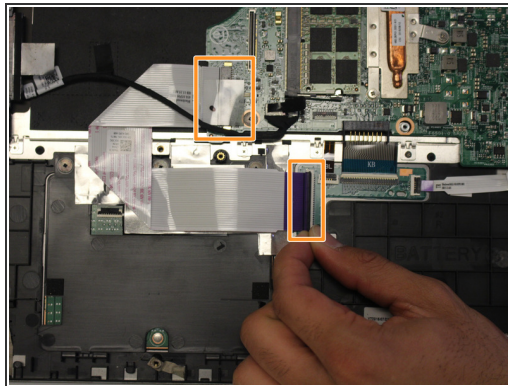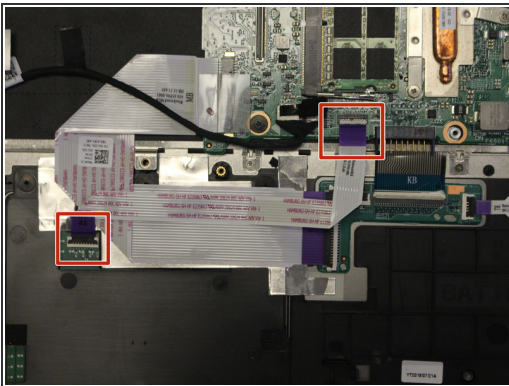

- Use a nylon spudger to lift the ZIF connector tab. Gently pull the touchpad ribbon cable free.
- Use a nylon spudger to lift the ZIF connector tab. Gently pull the keyboard daughter board ribbon cable free.

Step 6

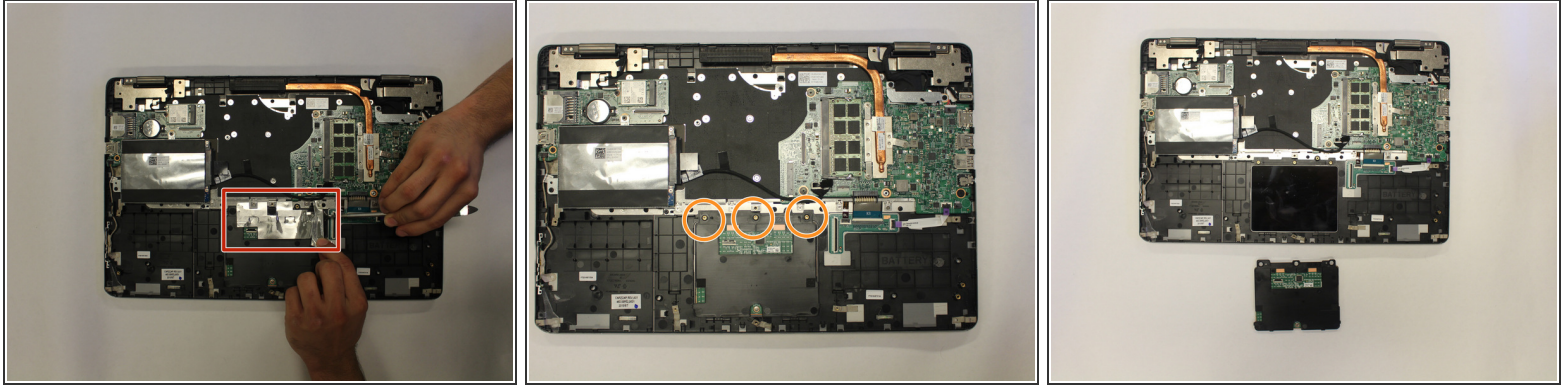

- Remove the touchpad foil using a spudger or other ESD safe blunt-tip tool.
- Unscrew & remove the three 2mm wafer screws holding the touchpad.
- Remove the touchpad.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 06:30:55 AM.